

# DS MASTER 1

Instruction Manual

# Table of contents

▶ <b>Checking the supplied items</b> .....	1
▶ <b>Notes on safe operation</b> .....	2
▶ <b>Names and functions</b> .....	3 • 4
▶ <b>Caution</b> .....	5
▶ <b>Trouble shooting</b> .....	6
<b>Specification</b>	
▶ <b>Warranty</b> .....	7

## Supplied items

 
If any items missing, please contact our authorized dealer or DS Audio.




**Equalizer: (1)**



**Optical Cartridge: (1)**

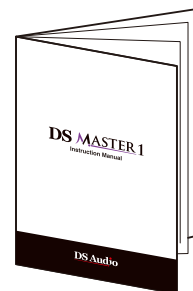


**Manual: (1)**

 


**EQ foot: (1)**



 **Needle cover: (1)**



**Screws: (1)**

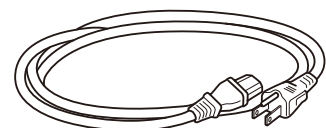 

**Power cable: (1)**

# Notes on safe operations

## Initial setup

- Place the player in a location with adequate ventilation to prevent heat build-up in the apparatus.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes on the bottom.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.

## Power requirements

 
- [                      V AC, 50 / 60 Hz ]

## POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord time to time.

## On repair

- Please consult our authorized dealer nearest to you

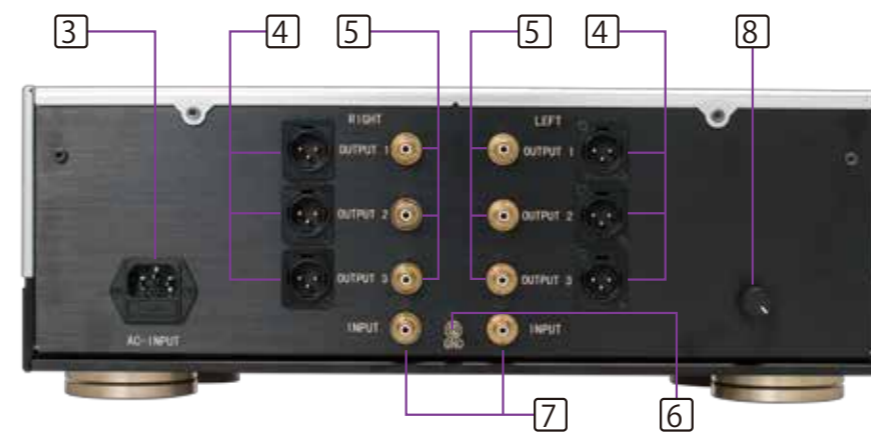

- 1 Power Switch** Power On / Off button
- 2 Front Panel LED** 2LEDs under power switch are used as power indicator.They are on all the time when power is on
- 3 AC Power Input** AC power cable is connected to the AC Power Source
- 4 XLR output ( Line out )**
- 5 RCA output ( Line out )**  
 ※Connect to your AUX terminal of your pre/main amplifier.  
 ※Do not connect MM/MC cartridge to this Equalizer. It may break MM/MC cartridge.  
 ※There are three sets of output.Each output provides different low frequency cut off level.Please use preferred out put level.  
**OUT PUT1 ( Single cut-off )**  
**Cut-off frequency:below 30Hz by 6db/oct**  
**OUT PUT2 ( Double cut-off )**  
**Cut-off frequency1:below 50Hz by 6db/oct.Cut-off frequency2:below 30Hz by 6db/oct**  
**OUT PUT3 ( Triple cut-off )**  
**Cut-off frequency1:below 50Hz by 6db/oct.Cut-off frequency2:below 30Hz by 6db/oct**  
**Cut-off frequency3:below 25Hz by 12db/oct**
- 6 GND** Connect ground line of your turn table player
- 7 INPUT**  
L / R channel lines of your turn table player are connected to those terminals. Make sure that each channel is connected to the same channel, while Optical cartridge is taking power out from those lines, Misconnection may damage the cartridge.
- 8 Dimmer switch for front panel LED**  
Clockwise→Brighter . Counter clockwise→Darker.

- 9 Power indicator LED**  
LED indicates power is on when it is lit. When Equalizer is turned on, yet LED is not lite,check the Cartridge connection and Equalizer connection
- 10 Cantilever / Stylus**  
Adjust the Stylus pressure carefully as recommended. Other settings should follow as those for MM / MC cartridge.
- 11 Output pins**  
Connect Output pins as described in “Output pin connection”.

**⚠ Precautions**

1. Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine.
2. Operational temperature should be 20degreeC to 26degree C. Warming up is recommended in winter time.
3. This optical cartridge is Amplitude proportional signal read out. It required our designated equalizer. Outputs from the equalizer should be connected to CD / AUX terminals of your amplifier. Do not connect to Phono terminals.

**“Output pin connection”**



**◀ Stylus Replacement ▶**

Stylus replacement is available at DS-Audio. Please consult our authorized dealer for its cost and time.

# Cantion

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.



**WARNING**



**Do not operate this equipment when it is broken**

When it is broken, do not turn the power on.  
Unplug the AC power line and keep the switch turned off.  
Turning the power on may cause fire or smoke.  
Do not open the cabinet to avoid electrical shock.



**Do not make any changes or modification**

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.



**Keep away from water/moisture**

To reduce the risk of fire or electrical shock, keep this apparatus away from water / moisture.



**No liquid nearby**

To reduce the risk of fire or electrical shock, do not place drinks/any liquid nearby for precaution.



**Do not open the cabinet**

Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.



**PRECAUTION**



**Place this apparatus firmly**

Avoid placing this apparatus on unstable table.  
Do not tilt the apparatus.



**Away from heat and dust**

Avoid placing this apparatus in dusty place / high temperature



**Connections to other devices**

When connecting this apparatus, please refer to the setup manual of connecting devices

## Trouble shooting

Should any problem persist after you have checked those symptoms, please consult our authorized dealer nearest to you.

Symptom	Cause	Corrective action
No Power	No AC power	Check the power cord connected securely Plugs are dirty. Clean the plugs with a dry soft cloth periodically.
No sound	Loose connection	Connect signal plugs firmly. Plugs are dirty. Clean the plugs with a dry soft cloth periodically.
Humming noise	Loose Ground connection Plugs are dirty	Connect ground line firmly. place it away from noise source such as transformer / motor
No sound when switched on	This EQ contains ample capacitance for the best sound quality. It takes few minutes to warm up.	we recommend one minute of warm up time

## Specifications

DS Master1

### DS Master1 CR

<b>Signal output</b>	Phono-electric Conversion
<b>Output Signal level</b>	500mV and more(at Equalizer output)
<b>Channel Separation</b>	25dB and more
<b>Needle Pressure</b>	1.6g ~ 1.8g(1.7g is Recommended)
<b>Canti-lever</b>	Sapphire
<b>Stylus</b>	Micro Ridge Stylus
<b>Weight</b>	8.1 g
<b>Body Material</b>	Super Duralumin

### DS Master1 EQ

<b>Rated output voltage</b>	500mV(1kHz)
<b>Input terminal</b>	RCA Terminals
<b>Output Terminal</b>	RCA Terminals×3 ,XLR output ×3
<b>Size</b>	436W×161H×395D (mm)
<b>Impedance</b>	120 Ω
<b>Weight</b>	24 kg

# Warranty

## WARRANTY

### Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call your Cartridge dealer regarding this product.

**Model No. DS Master1**

**Serial No.** \_\_\_\_\_

### WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

#### IMPORTANT SAFETY INSTRUCTIONS

-SAVE THESE INSTRUCTIONS

-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

### LIMITED WARRANTY

DS Audio warrants this product against defects in material or workmanship for the time periods as stated below. Pursuant to this Limited Warranty, DS Audio will, at its option, (1) repair the product using new or refurbished parts or (2) replace the product with a new or refurbished product.

For the purposes of this warranty, "refurbished" means a product or part has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

For a period of one (1) year from the original date of purchase of the product, DS Audio, at its option, repair or replace with new or refurbished product, product determined to be defective.

This limited warranty covers only the hardware components packaged with the product. It does not cover technical assistance for hardware.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the DS Audio authorized service facility specified.

Any parts or product replaced under this limited warranty will become the property of DS Audio.

This limited warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use. It does not cover product issues caused by any other reasons, including but not limited to product issues due to commercial use, acts of God misuse, limitation of technology, or modification of any part of product.

This limited warranty is invalid if the factory-applied serial number has been altered or removed from the product.

This limited warranty is valid with the official receipt of our authorized dealer which indicating the date of your purchase.